


### Installation:

1. Position the front wheel between the fork legs and insert the front axle from the left side, through the left fork leg and wheel hub.
2. Align the end of front axle (6) with the surface of fork leg (7).
3. Tighten the axle bolt to the specified torque:  
79 N·m (8.1 kgf·m , 58 lbf·ft)
4. Tighten the axle pinch bolts on the right fork leg to specified torque:  
22 N·m (2.2 kgf·m , 16 lbf·ft)
5. Temporarily tighten the axle pinch bolts on the left fork leg until they lightly seat.
6. Make sure that the front fork spacers ( 8 ) are installed into the caliper bracket properly.
7. Install the right and left caliper assemblies to the fork legs and tighten the fixing bolts to the specified torque:  
45 N·m (4.6 kgf·m , 33 lbf·ft)

- To avoid damaging the brake pads while installing the caliper assemblies, carefully fit both brake discs between the pads.
8. Operate the front brake and pump the fork several times.

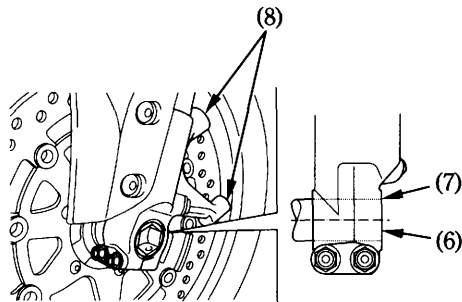

(6) End of front axle  
(7) Surface of fork leg

(8) Front fork spacers