


Rebound Damping:

The rebound damping adjuster has at least 12 positions. Turning the adjuster one full turn advances the adjuster 6 positions.

To adjust to the standard position:

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the adjuster counterclockwise 3 clicks until the punch mark (2) on the adjuster aligns with the reference mark (3). This is the standard position.
3. Make sure that both fork legs are adjusted to the same position.

Always start with the full hard position when adjusting damping.

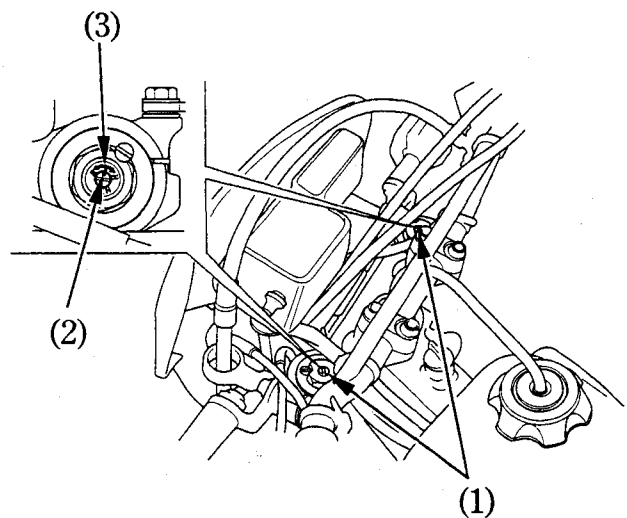

- (1) Damping adjuster
- (2) Punch mark
- (3) Reference mark