

## Frame servicing



(1) AXLE


### Installation

Clean the surfaces where the axle and axle clamps contact each other.  
Place the front wheel between the fork legs, while inserting the brake disc between brake pads without damaging them.

Apply thin layer of grease to the axle surface.  
Apply grease to the axle threads.  
Install the axle from the right side through the wheel.

Tighten the axle to the specified torque.


**Torque: 69 N•m (7.0 kgf•m, 51 lbf•ft)**

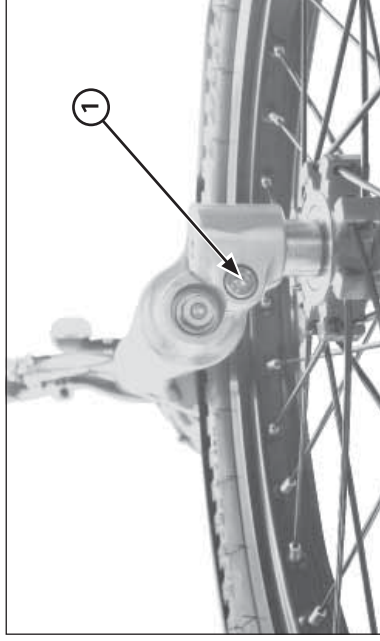

(1) AXLE PINCH BOLT

While keeping the fork parallel, tighten the axle pinch bolt to the specified torque.

**Torque: 21 N•m (2.1 kgf•m, 17 lbf•ft)**

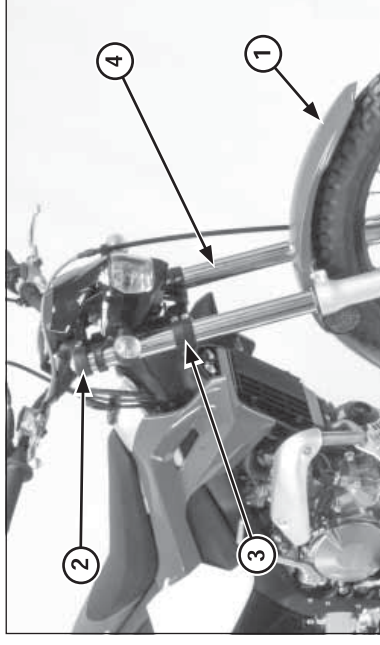

(1) FRONT FENDER  
(2) TOP BRIDGE  
(3) BOTTOM BRIDGE  
(4) FORK LEG

### Fork

#### Removal

Remove the front wheel (page 4-1).

Remove the front fender.  
Loosen the top bridge pinch bolt.  
If the forks are to be disassembled, loosen the fork bolt.

### NOTICE

*To avoid damaging the fork bolt threads, loosen the top bridge pinch bolt before loosening the fork bolts.*

Loosen the bottom bridge pinch bolts, and pull the fork tube down and out.